

---



---

**CD/DVD PLAYER**  
**(& Stereo Radio)**  
**Exterior Entertainment**  
**Center**  
**-If Equipped**




The TV operates from 120-volt AC household current only, so you must have either the shoreline connected, the generator running, or the inverter turned on (if equipped).

The exterior entertainment center TV is connected to the exterior DVD player, the rooftop antenna, and the park cable input.


**Play DVD**

- Turn TV and DVD player On.
- Press the SOURCE or INPUT button on the TV or TV remote to select INPUT 2 or AV2.
- The TV screen will display the DVD player logo when the correct input is selected.
- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show “READING” or “LOADING”.

- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT button until you see the main menu screen.

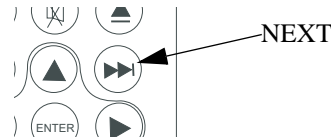

- When the main menu screen appears, use the arrow buttons on the DVD remote to select the desired entry or press the ENTER or PLAY buttons on the remote (or “Play” button on DVD player) to begin playing the feature.

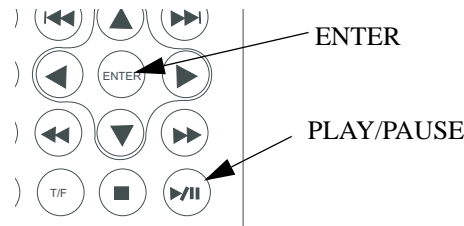

- Volume is adjusted with the DVD remote (or volume buttons on DVD player).

**Antenna**

- Turn On antenna booster inside coach.



- Turn On TV and tune to desired channel.

**Cable**

**(Park cable input located in power cord compartment)**

- Turn Off antenna booster inside coach. See above photo.
- Turn On TV and tune to desired channel.

**Further Information**

For further information and operating instructions, see the manufacturer’s information included in your InfoCase.

# Audio-Video System Basic Operation Guide

## **CD/DVD PLAYER & STEREO RADIO ALARM CLOCK**

### **Exterior Entertainment Center -If Equipped**

---

*NOTE: See your InfoCase for specific  
operating guides for audio and  
video components.*

